




## MARQUEE PUSH-BUTTON REPAIR

<p><b>Step 1</b> Remove the lower leg and foot from the upper leg (lie marquee down and pull out).</p>	
<p><b>Step 2</b> The button must be inserted "button down" and with the button facing the holes in the lower leg.</p>	
<p><b>Step 3</b> Squeeze the button and insert it into the lower leg.</p>	
<p><b>Step 4</b> Push the button into the leg using a long screwdriver or similar. Push until it clicks out through the first hole in the lower leg.</p>	
<p><b>Step 5</b> Insert the lower leg back into the upper leg of the marquee. Push the button in to get the leg back up into the upper leg past all of the holes.</p>	